

Maintenance and Replacement Instructions

In-Duct Lamps

Maintenance

UV lamp(s) should be replaced once a year.

Replacement

Access to the UV lamps will differ slightly from model to model but the method to remove old lamps and install replacements is universal:

- hold the bulb near the middle, using a cotton glove or clean rag between your hand and the glass, and tilt it at a 45 degree angle to disengage the locking mechanism. **DO NOT ATTEMPT TO PULL THE BULB STRAIGHT OUT OF ITS HOUSING.** The locking mechanism will not disengage unless you tilt the bulb at a 45 degree angle.
- To install a new bulb, tilt the new bulb 45 degrees and line up the 4 prongs on the bulb with the 4 holes in the base. Now simply rotate the bulb until it is level with the housing unit and you hear a loud click.